


Step - 1 : Mark out distance of spigot




Step - 2 : Core hole




Step - 3 : Fixed spigot onto glass and tighten bolts 1 & 2 equally

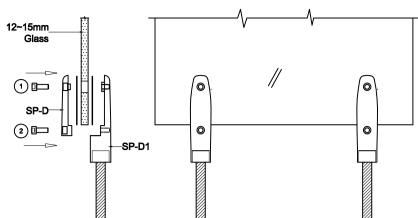


Step - 4: Install glass (with spigot) into core hole. Using Wooden blocks and shim, align spigots.

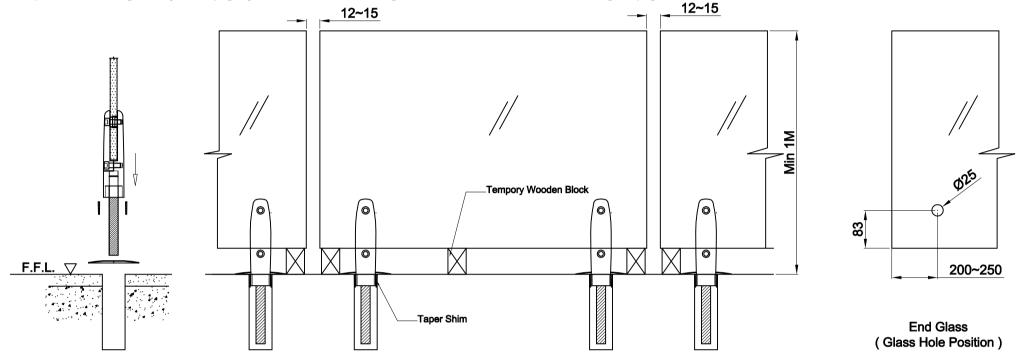

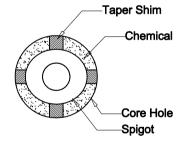

Step - 5: Once all the glasses are properly aligned pour chemical into hole

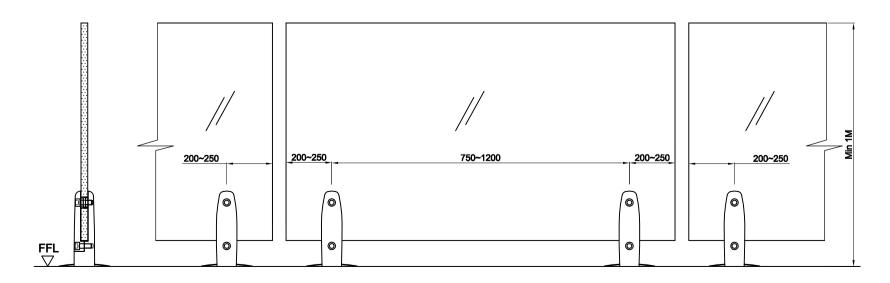

Step - 6: Once the chemical sets, remove shim & wooden blocks, check and clear glasses